


>> DVD Remote Control


- | | |
|----------------------|---|
| 1. POWER button | 20. EJECT button |
| 2. SETUP button | 21. CHANNEL buttons |
| 3. TV SYS. button | 22. CM SKIP button |
| 4. RECORD button | 23. EDIT button |
| 5. QUALITY button | 24. DVD/REC button |
| 6. SOURCE button | 25. STOP button |
| 7. Direction buttons | 26. F.FWD button |
| 8. RETURN button | 27. F.BWD button |
| 9. PLAY/ENTER button | 28. SLOW button |
| 10. PREV. button | 29. PAUSE button |
| 11. NEXT button | 30. MUTE button |
| 12. INFO. button | 31. TITLE button |
| 13. ZOOM button | 32. VOLUME buttons |
| 14. PBC button | 33. GOTO button |
| 15. MENU button | 34. CLEAR button |
| 16. Number buttons | 35. A-B REPEAT button;
REPEAT (1-ALL) button |
| 17. PROGRAM button | 36. ANGLE button |
| 18. SUBTITLE button | |
| 19. AUDIO button | |

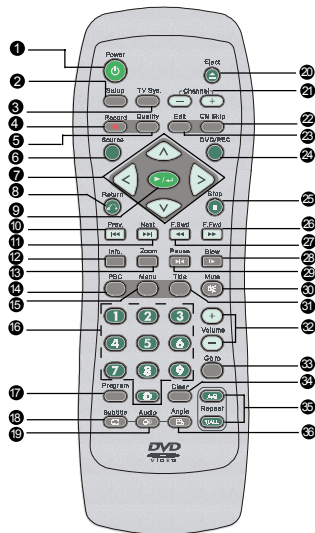

***Data is subject to change without further notice.**

>> VFD Display

1. **MP3 indicator**
Lights when a MP3 disc is loaded.
2. **REPEAT ALL / REPEAT A-B indicator**
Lights when REPEAT ALL or REPEAT A-B.
3. **NTSC indicator**
Indicates it's NTSC system.
4. **CHANNEL indicator**
Lights when a channel is being played back.
5. **Dolby Digital indicator**
Indicates Dolby digital sound playback.
6. **Schedule recording indicator**
Lights when schedule recording is on.
7. **REC indicator**
Lights when recording.
8. **ANGLE indicator**
Lights when angle is being played back.
9. **Program indicator**
Lights when programming the disc.
10. **SVCD indicator**
Lights when a SVCD is loaded.
11. **DVD indicator**
Lights when a DVD is loaded.
12. **PAL indicator**
Indicates it's PAL system.

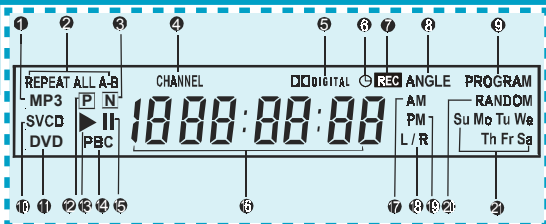

13. **PLAYBACK indicator**
Lights when playing back any disc.
14. **PBC indicator**
Lights when PBC function is on.
15. **PAUSE indicator**
Lights when PLAYBACK is paused.
16. **Counter display**
Display the playback mode, type of disc, playback time, remaining time and etc.
17. **AM indicator**
Indicates it's AM time.
18. **L/R indicator**
Indicates Left or Right sound playback.
19. **PM indicator**
Indicates it's PM time.
20. **RANDOM indicator**
Lights when playing back in Random order.
21. **Date indicator**
Indicates the week days from Monday to Sunday.